



Scan to Access User Guide Videos



Scan to Access User Manual

A229 Pro

USER MANUAL

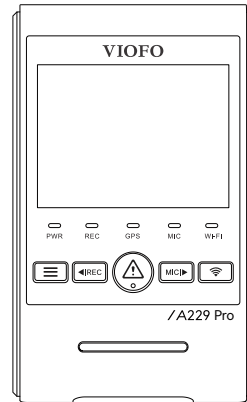



Table of Contents

1. Product Overview	01	4. Video Playback and Management	28
Standard Items	01	Video Playback on Dashcam	28
Optional Accessories (Sold Separately)	02	Video Playback on VIOFO APP	29
Product Diagram	03	Video Playback on PC	29
		Video File Storage Location	30
2. Installation	10	5. Review and Control on Smartphone	31
Insert / Remove the Memory Card	10	Connect to Smartphone	31
Install the Front Camera	12	APP Layout Overview	32
Install the Static Sticker (Optional)	14	6. Install Accessories	34
Install the Rear Camera (Optional)	15	Install CPL on Front Camera	34
Install the Interior Camera (Optional)	16	Install CPL on 1080P Rear Camera (Optional)	34
Install the 1080P Rear Camera (Optional)	18	Install CPL on Telephoto Camera (Optional)	35
Install the Waterproof Rear Camera (Optional)	20	Install Bluetooth Remote Control (Optional)	35
Install the Telephoto Camera (Optional)	21	7. Dashcam Settings	36
Remove Cameras	23	Video Settings	36
		System Settings	42
3. Dash Cam Recording Operation	23	File Lists	46
Initial Setup	23	8. Firmware Upgrade	46
Power On / Off	26	9. Notice	47
Loop Recording	26	10. Customer Service	49
Emergency Recording	27		
Disable / Enable Audio Recording	27		
Parking Mode	27		

Standard Items



 Front Camera
+GPS Mount



Type-C Data
Cable



Car Charger
Adapter



CPL for
Front Camera



Spare Mount
Sticky Pad



Trim Removal
Tool



Windshield
Static Stickers


*** Note:**

 The USB data cable is only for connecting the camera with computer to transfer video files or upgrade firmware, not for charging the camera.

Optional Accessories (Sold Separately)



Rear
Camera



Interior
Camera



Rear Camera
Cable (6M)



Telephoto
Camera



Telephoto Camera
Cable (0.6M)



CPL for Telephoto
Camera



1080P Rear
Camera



1080P Rear
Camera Cable
(6M)



CPL for 1080P
Rear Camera



Waterproof
Rear Camera



Waterproof
Rear Camera Cable
(7.5M/9.5M/14.5M)



Interior Camera
Cable(1M)



HK4
Hardware Kit




MicroSD
Card




Bluetooth
Remote Control

Product Diagram


■ Front Camera (Main Unit)

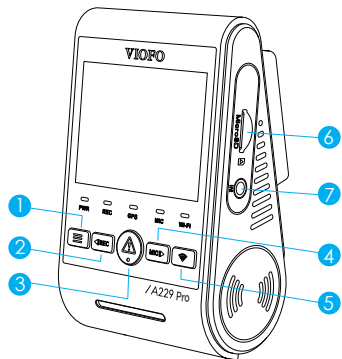

- 1 - Menu / Power On | Off
- 2 - Menu Up / Recording Start | Stop
- 3 - Menu Confirm / Video Protect / Playback
- 4 - Menu Down / Microphone On | Off
- 5 - Wi-Fi On | Off
- 6 - Memory Card Slot
- 7 - Interior Camera Port / 1080P Rear Camera Port

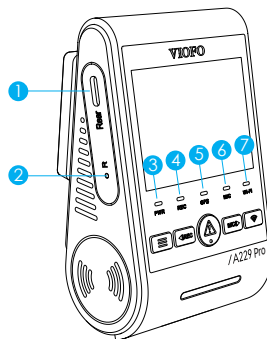

- 1 - Rear Camera Port / Waterproof Rear Camera Port / Telephoto Camera Port / Power In / Data Cable Port
- 2 - Reset Button
- 3 - Power Status Indicator
- 4 - Recording Status Indicator
- 5 - GPS Status Indicator
- 6 - Microphone Status Indicator
- 7 - Wi-Fi Status Indicator

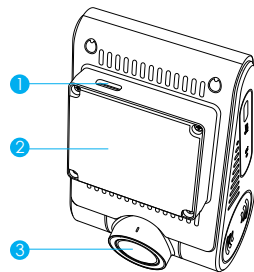


- 1 - USB Power Port
- 2 - Mount (GPS Module)
- 3 - Lens

■ Rear Camera (Optional)




1. Bracket
2. Power In
3. Lens

 ■ Interior Camera (Optional)




1. Bracket
2. Power In
3. Lens
4. Infrared LED
5. IR Light Sensor

 ■ 1080P Rear Camera (Optional)




1. Bracket
2. Power In
3. Lens
4. LED Indicator

■ Waterproof Rear Camera (Optional)

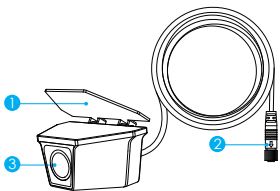

1. Bracket
2. Power In
3. Lens

 ■ Telephoto Camera (Optional)














1. Bracket
2. Power In
3. Lens
4. LED Indicator





 
LED Indicators






LED	Led Status	Behavior
PWR	Flashing Red	Updating Firmware
	Solid Red	Power On
	Off	Power Off
REC	Solid Red	Recording
	Flashing Red	Not Recording
GPS	Flashing Blue	GPS Signal Receiving
	Solid Blue	GPS Signal Received
	Off	GPS Disabled
MIC	Solid Blue	Audio Recording On
	Off	Audio Recording Off
Wi-Fi	Flashing Blue	Wi-Fi On and Waiting Connecting
	Solid Blue	Wi-Fi Connected
	Off	Wi-Fi Disabled

Buttons and Icons


Mode	Buttons	Behavior
Recording Mode		Long press to power off Click once to take photo
		Click once to stop recording
		Click once to lock the file being recorded
		Click once to enable /disable audio recording Long press to enable /disable parking mode
		Long press to enable / disable Wi-Fi Click once to change live video source

Mode	Buttons	Behavior
Standby Mode (Not Recording)		Click once to enter menu
		Click once to start recording Long press to format the card
		Long press to enter playlist
		Click once to enable /disable audio recording Long press to enable /disable parking mode
		Long press to enable / disable Wi-Fi Click once to change live video source
		Long press simultaneously to enable / disable the interior camera

Mode	Buttons	Behavior
Playlist Mode		Return to previous menu / Exit playlist
		Menu up / Change playback speed / Delete the video
		Select the current video / Play / Pause
		Menu down / Change playback speed / Lock current / Unlock current video
		N/A

Mode	Buttons	Behavior
Setting Menu Mode		Exit setting menu / Return to previous menu
		Menu up
		Enter / Confirm setting options
		Menu down
		N/A

Display Overview

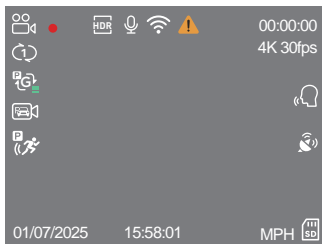


	Recording Mode		Wi-Fi Status
	Recording Status		Emergency Lock
	Loop Recording Status	00:00:00	Recording Time
	Parking G-sensor Status	4K 30fps	Video Resolution
	Parking Mode		GPS Status
	Auto Event Detection		Voice Control
	HDR Status		microSD Card Status
	Microphone Status	MPH	GPS Speed

Installation

Insert / Remove the Memory Card

■ Insert the memory card

Ensure the camera is turned off. Hold the memory card in the orientation shown, slide it into the card slot until you hear a click.

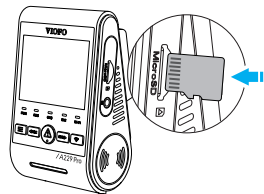

■ Remove the memory card

Ensure that the camera is turned off, and then push the edge of the memory card with your fingernail. The card will spring out far enough to be removed.

Note:

- The microSD card is sold separately. The microSD card must have a high endurance and the capacity is up to 512GB.
- We recommend that you buy VIOFO industrial grade microSD card for extended endurance, excellent performance and reliability.
- Memory card must be formatted before first use. Please format the card on a computer or in the camera to the exFAT or FAT32 file system.
- Please turn off the A229 Pro before inserting or removing the microSD card.
- Inserting or removing the microSD card while recording may destroy the files.

■ Format the memory card

Memory card must be formatted before first use.

Format the memory card in the camera

To format the card in the camera, either use the format option in the Settings, or alternatively long press the [◀IREC] button.

Format the memory card using a computer

To format the memory card on your computer, follow your computer's user manual. For deep formatting of the memory card, you can also download the GUIFormat tool from our official website: <https://viofo.com/download/guiformat.exe>


Note:

We suggest formatting the card periodically to ensure the best performance of the camera.


Formatting the card will erase all data permanently, please back up important data beforehand.

Install the Front Camera

1. Select a location on the windshield behind the rear-view mirror where the camera will not obstruct the driver's view while driving.

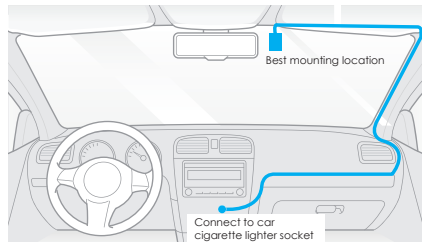


2. Wipe clean the installation surface of the windscreen with a dry cloth, it must be grease free for the sticky pad to stick firmly.
3. Mount the dashcam directly to the windshield with the sticky pad, or attach the static sticker to the selected location before installation (Refer to guide on page 13).
4. Peel the protection film off the sticky pad and camera lens.

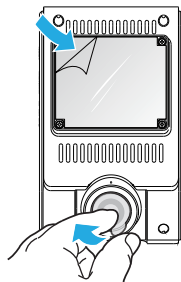


5. Fix the camera on the selected location.

6. Adjust the Lens Angle

- Look at the live view on the LCD.
- Adjust the angle of the lens up / down if necessary.

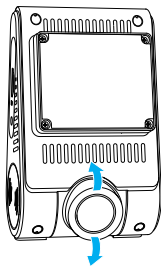

7. Connecting to Power

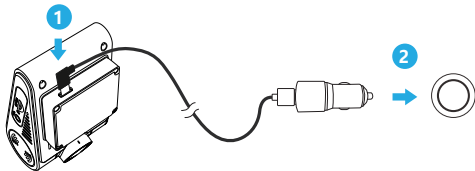


Insert the car charger USB cable's male port into the camera mount's Type-C port. Plug the car charger adapter into your vehicle's 12V / 24V female power socket.

Install the Static Sticker (Optional)

1. Wipe clean the surface of the windscreen before installation.


2. Peel the red sign protective film off the static sticker, then attach the sticker to the windscreen. Press it for a few seconds, making sure no bubbles are left.

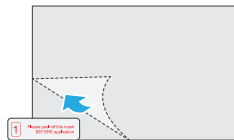

3. Peel the green sign protective film off the static sticker.




4. Peel the protection film off the sticky pad on the mount, and attach it to the sticker. Press the camera hard for a few seconds, making sure it is attached firmly.

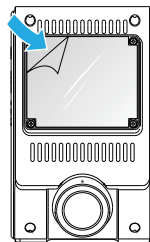



Install the Rear Camera (Optional)

1. Select an installation location on the windscreen, without defrost grid wires, and where the camera can record the entire rear view.
2. Wipe clean the installation surface of the windscreen with a dry cloth.
3. Peel the protection film off the sticky pad and camera lens.

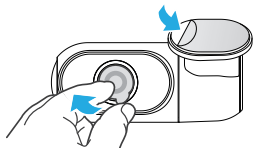


4. Fix the rear camera on the selected location.
5. Connecting with Rear Camera

Power off the front camera (main unit), and connect the rear camera to the front camera using rear camera cable. Cable routing should be as shown in the following two diagrams.

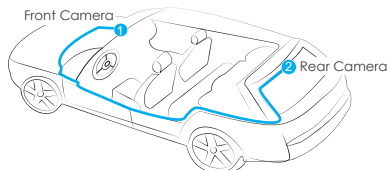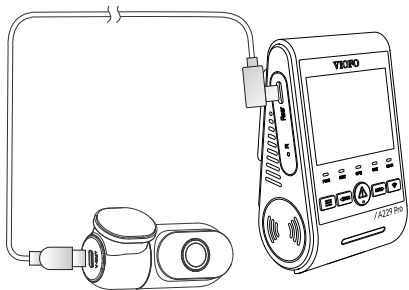

Install the Interior Camera (Optional)

1. Select an installation location.
2. Wipe clean the installation surface of the windscreen with a dry cloth. Select a location on the windscreen, without defrost grid wires, and where the camera can record the entire Interior view.
3. Peel the protection film off the sticky pad and camera lens.


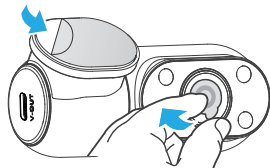


4. Fix the Interior camera on the selected location.

5. Connecting with Interior Camera.

Power off the front camera (main unit), and connect the interior camera to the front camera using interior camera cable.

Cable routing should be as shown in the following two diagrams.

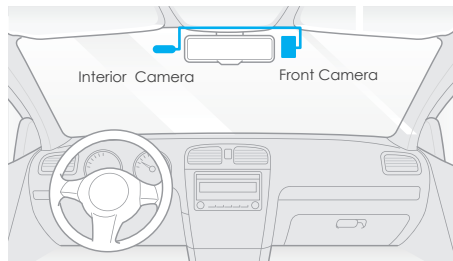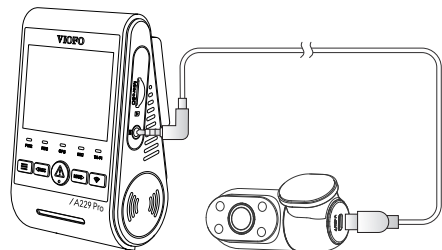

Tips:

1. Do not install / mount the camera in a location that interferes with the driver's visibility and safety.
2. Install / mount the camera close to the rearview mirror so that both sides of the scene being recorded are

equally covered by the camera's FOV (field of view).

3. To ensure a clear view on rainy days, the lens should be positioned within the windshield wiper's sweeping range.

4. Do not install / mount the camera on or near airbag panels.


5. Installation / mounting location should not be affected by sun control film (window tint). There should not be any other electronic equipment close to the camera for optimal performance.

Note:

Do not install / mount the camera or cables near an airbag panel or within the airbag's working range. The manufacturer is not liable for any injury or death caused by deployment of the airbag.

Install the 1080P Rear Camera (Optional)

1. Select an installation location on the rear windscreen, without defrost grid wires, and where the camera can record the entire rear view.
2. Wipe clean the installation surface with a dry cloth.
3. Peel the protection film off the camera lens.


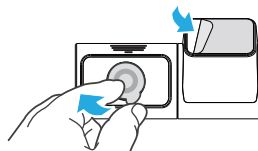


4. Fix the 1080P rear camera on the selected location.

5. Connecting the 1080P rear camera.

Power off the front camera (main unit), and connect the 1080P rear camera to the front camera using 1080P rear camera cable.

Cable routing should be as shown in the following two diagrams.

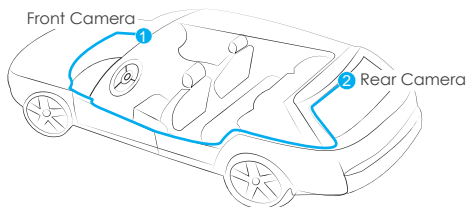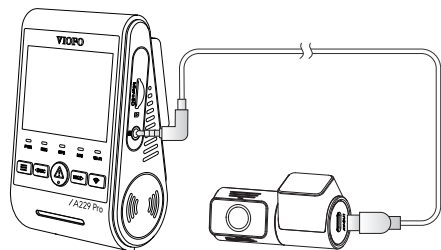

Note:


The 1080P rear camera cable is only compatible with the Int. port.

Install the Waterproof Rear Camera (Optional)

1. Select an installation location on the exterior rear of the vehicle.

2. Wipe clean the installation surface with a dry cloth.

3. Peel the protection film off the camera lens.

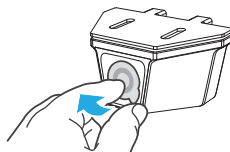


4. Secure the camera using 3M adhesive sticker (peel the protection film off first) or screws provided.

Option 1





Option 2

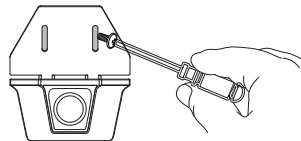

5. Connecting waterproof rear camera.

Power off the front camera (main unit), and connect the waterproof rear camera to the front camera using waterproof rear camera cable.

Cable routing should be as shown in the following two diagrams.

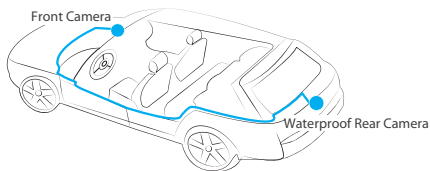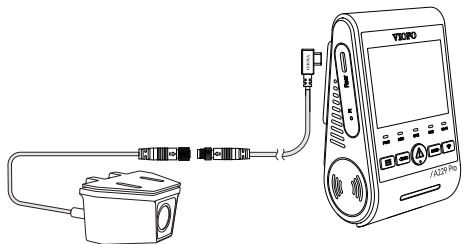


Note:



The waterproof rear camera cable is only compatible with the Rear port.

Install the Telephoto Camera (Optional)

1. Select a location on the windshield under the rear-view mirror.
2. Wipe clean the installation surface of the windscreen with a dry cloth.
3. Peel the protection film off the sticky pad and camera lens.

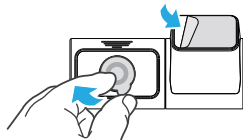

4. Fix the telephoto camera on the selected location.
5. Connecting the telephoto camera.
Power off the front camera (main unit), and connect the telephoto camera to the front camera using telephoto camera cable.
Cable routing should be as shown in the following two diagrams.

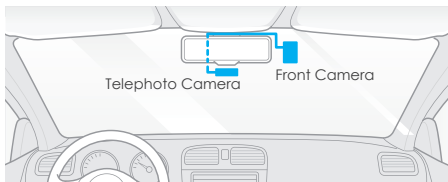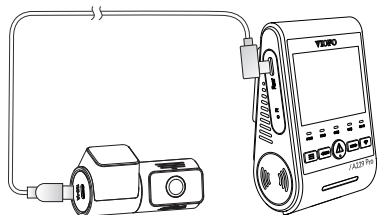


Note:

The telephoto camera must be connected to the Rear port using the 0.6M telephoto camera cable only.

Remove Cameras

To remove the front camera from its bracket, slide the camera to the right and pull the front camera out of the mounting bracket.

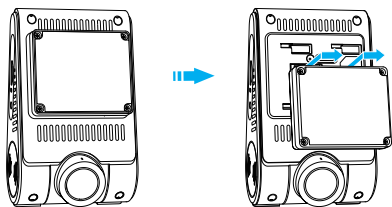

Note:

When you want to plug and unplug the rear or interior camera, please turn off the camera first.

Dash Cam Recording Operation

Initial Setup

Upon the first activation of the dashcam, please perform the initial setup by setting the language, time zone and speed unit.


① Language Setting

When prompted with the initial setup dialog to set a language, press the menu up [◀|REC] and menu down [MIC|▶] buttons to select the language, and press the OK [▲] button to confirm.




② Time Zone Setting

Press the menu up [◀|REC] and menu down [MIC|▶] buttons to select the time zone, and press the OK [▲] button to confirm. You can also press the [≡] button to return to the previous level to modify settings.

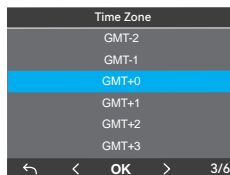


③ Confirm Auto Time and Date Setup

Press the OK [▲] button to confirm.

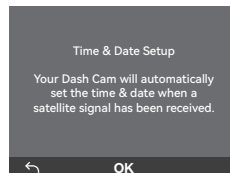


④ Speed Unit Setting

Press the menu up [◀REC] and menu down [MIC▶] buttons to select the speed unit, and press the OK [△] button to confirm.

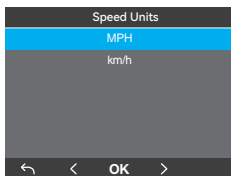

⑤ Format microSD Card

Memory card must be formatted before first use. Select the [✓] and press the OK [△] button to confirm formatting the memory card. After successful formatting, the camera will automatically restart and power on.

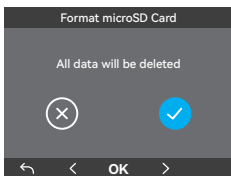

Note:

- The above settings can be modified anytime from the settings menu.
- After restoring device to factory settings, the initial setup interface will also be triggered upon startup.

Power On / Off

1. When you start the engine, the camera will turn on and begin recording automatically.
2. When you turn off the engine or unplug the charging cable from the power adapter, the camera will stop recording and turn off.
3. Short press [≡] button to power on the camera.
Long press [≡] button to power off the camera.

Loop Recording


1. Insert a microSD card into the camera's card slot and automatic loop recording will begin once the camera detects power.
2. Time frame for each video file is 1 / 2 / 3 / 5 / 10 minutes.
3. When there is insufficient space on the microSD card, loop recording will automatically overwrite the oldest files (one by one).
4. Loop recording files are saved to microSD card:
\\DCIM\\Movie.

Emergency Recording

1. Automatic emergency recording

When the G-sensor is activated by a collision, the current footage will be locked automatically to avoid being overwritten by loop recording.



2. Manual emergency recording

Pressing the [] button during a recording will lock the current file being recorded. Once locked, the file will not be overwritten by the loop recording feature.

Note:

Collision detection sensitivity can be adjusted in settings under the "G-sensor" option. Locked files are saved to microSD card: DCIM \ Movie \ RO

Disable / Enable Audio Recording

Pressing the [] button once to turn off / on audio recording, [] LED light will be off / solid Blue.

Parking Mode

There are three options for parking mode.

1. Time Lapse Recording

Time lapse records a video at low frames at 1 / 2 / 3 / 5 / 10 fps, it keeps recording continuously without audio recorded.

Note:

Timelapse 1 fps mode supports Night Vision option, which can provide brighter and clearer night vision in

extreme low light conditions, with lower power consumption.

2. Low Bitrate Recording

This mode uses low bitrate to record video and audio, and uses small file sizes for continuous recording.

3. Auto Event Detection







The camera will automatically record a video sequence while a moving object is being detected during parking mode. It will stop recording when no new movement is detected.

Note:

Parking mode provides surveillance of your parked vehicle only when the engine is off and the USB Type-C Hardwire Kit is used to provide continuous power. The Hardwire Kit also protects your car battery from being drained. We recommend buying the VIOFO HK4 ACC hardwire kit cable for parking mode recording.

Video Playback and Management

Video Playback on Dashcam

1. Under standby mode (not recording), long press [] button to enter the playlist.
2. Use the arrow buttons [  ] to select the desired video and press the button [] to play.
3. Press the [] button to exit.

Video Playback on VIOFO APP

Long press the Wi-Fi button to enable Wi-Fi. Connect Wi-Fi on your phone first. Open VIOFO app and choose "Connect Camera" to use your phone to control the dashcam. You can play and manage files through the APP. You can check the app introduction refer to

[[Review and Control on Smartphone](#)].

Video Playback on PC

1. Remove memory card from dashcam.
Before removing the memory card, make sure you have switched off the Dashcam.
2. Insert the memory card into a microSD card adapter or card reader connected to your PC.
3. Open VIOFO Player, add videos from the DCIM folder for playback.



Download VIOFO Player from our official website:
<https://www.viofo.com/pages/viofo-app>

Note: For your PC with a microSD slot, you can directly insert the memory card into it.

Video File Storage Location

Recording Mode	Behavior
Loop Recording (Including Time-lapse Recording)	DCIM \ Movie
Emergency Recording (Locked Video)	DCIM \ Movie\ RO
Parking Recording (Auto Event Detection / Time-lapse Recording / Low Bitrate Recording)	DCIM \ Movie \ Parking
Snapshot	DCIM \ Photo

File Format Definition

Files recorded by front camera, interior and rear camera are saved separately.

2024_0827_112625_00001PF.MP4
2024_0827_112625_00002PI.MP4
2024_0827_112625_00003PR.MP4
2024_0827_112625_00004PT.MP4

-----● F for the front camera
I for the interior camera
R for the rear camera
T for telephoto camera

P for the video recorded
in the parking mode.

Year Date Time Sequence Number

Connect to Smartphone

The VIOFO app allows you to control your camera remotely by using a smartphone. Features include full camera control, live preview, playback and video recording.

■ Android Device

Android users can download the app from Google Play, or download the APK directly from our official website: <https://viofo.com/en/content/13-app/>

■ iOS Device

iOS users can download the app from the App store.




Download on the
App Store



GET IT ON
Google Play

■ Connect VIOFO APP

Turn on the Wi-Fi in the menu or long press the [] button. When the Wi-Fi is on, Wi-Fi name (SSID) and the password appear on the camera LCD screen.



- **Step 1:** Use the phone to connect A229 Pro Wi-Fi. When the phone is connected with the dashcam, the LED light on the camera shows solid blue.
- **Step 2:** Open the VIOFO app. Tap "Connect New Device" and select the dashcam model you want to connect to your phone for control.
- **Step 3:** Now you can see the live view of both cameras. You can change the settings and check the files on the app.

APP Layout Overview

Tap "Connect New Device" to pair the dashcam to your phone for control.





Home

- ① Device Connection & Setup
- ② Gallery
- ③ App Information & Settings



Live View

- ① Grid (On/Off)
- ② Switch Camera View
- ③ Voice Recording On/Off
- ④ App & Device Settings
- ⑤ View Gallery
- ⑥ Start/Stop Recording
- ⑦ Snap a Photo
- ⑧ Toggle Landscape View

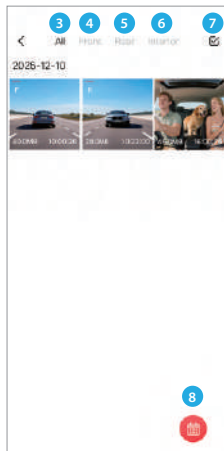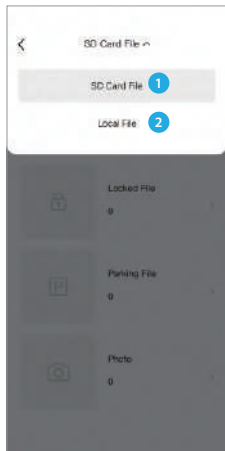


Gallery

- ① SD Card File (On Camera)
- ② Local File (On Phone)
- ③ All Video Clips
- ④ Front Video Clips
- ⑤ Rear Video Clips
- ⑥ Interior Video Clips
- ⑦ File Selection
- ⑧ Date Filter

Install Accessories


Install CPL on Front Camera

The CPL (Circular Polarizing Lens) can be used to reduce reflections and glare from the window glass and road surfaces that can otherwise damage image quality, this works in the same way as polarized sunglasses, getting more saturated and beautiful video.

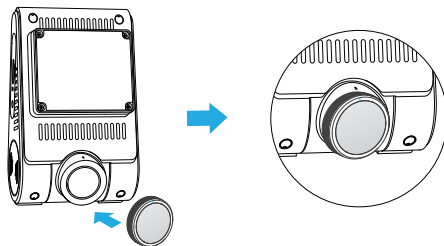


When installing the CPL, you need to align the white mark on the CPL with the corresponding mark on the camera.

Install CPL on 1080P Rear Camera (Optional)

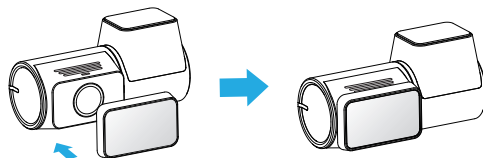

Install CPL on Telephoto Camera (Optional)

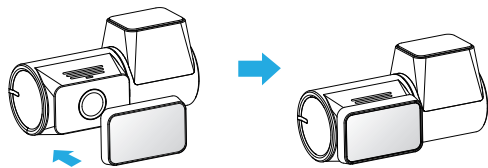


Install Bluetooth Remote Control (Optional)

The Bluetooth Remote Control (optional), featuring three buttons and conveniently mounting on your dashboard, allows you to safely lock important videos, turn on/off Wi-Fi, enable/disable HDR, and perform additional functions, all without diverting your attention from the road.

Pairing with dash camera

- Power on the camera.
- Press and hold the video lock button on remote control for 3 seconds to pair with camera.
- If get paired successfully, the LED indicator of the remote turns blue.

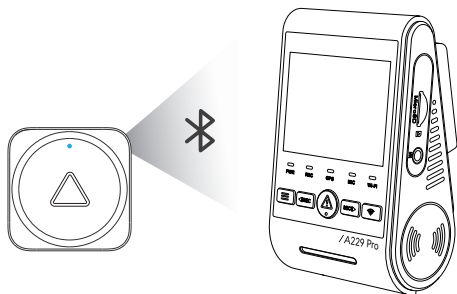

Dashcam Settings

You can set the dashcam settings according to your needs and preferences using the camera or the VIOFO App. To enter the settings menu, please stop recording first.

Video Settings

• Resolution:

- 1 Channel:
 - 4K 30fps
 - 4K 21:9 30fps
 - 2K 30fps
 - 1080P 30fps

2 Channels:

Front Camera + Rear Camera / Telephoto Camera / Waterproof Rear Camera:

- 4K P30+2K P30
- 4K 21:9+2K 21:9
- 2K P30+2K P30
- 1080 P30+1080 P30

Front Camera + Interior Camera / 1080P Rear Camera:

- 4K P30+1080 P30
- 4K 21:9+1080 P30
- 2K P30+1080 P30
- 1080 P30+1080 P30

3 Channels:

- 4K P30+2K P30+1080 P30
- 4K 21:9+2K 21:9+1080 P30
- 4K P30+1080 P30+1080 P30
- 2K P30+2K P30+1080 P30
- 1080 P30+1080 P30+1080 P30

• Video Bitrate: Low / Normal / High / Maximum.

You can set the bitrate for video. High bitrate may improve the quality and smoothness of the video, especially when recording fast motion or high contrast

scenes. Using high bitrate mode may decrease the amount of recording time available on your memory card. Using low bitrate will save space and record for longer time.

- **Record Audio:**

Turn on and off the microphone. This can also be changed during recording by pressing the microphone button [MIC▶].

- **Exposure Value (Front / Rear / Interior / Front Tele):**

Adjusting the value of the EV (Exposure Value) properly can create better footage under different light sources. It ranges from -2.0 to +2.0. You can adjust the EV for the front, rear and interior cameras separately. The default is set at 0.0.

- **HDR (Front / Rear / Front Tele):**

Off / On / Auto HDR Timer. You can set HDR for cameras separately. The default setting is On.

The multi-exposure HDR technique helps automatically balance the lighting in over bright and over dark areas to avoid over exposure issues.

Note: When the front camera HDR is set to 'Auto', the rear camera HDR will then display 'Auto' option. The HDR Timer follows the front camera's and cannot be adjusted individually. The 1080P rear camera HDR is always ON by default.

- **G-Sensor:**

The G-sensor measures shock forces and locks the video recorded at the time. The settings from "low to high" determine the amount of force needed to lock the file from being overwritten. We recommend that you set it at low.

- **Stamp:** Choose to imprint the information on the recorded video.
Date Stamp / GPS Speed Stamp / GPS Coordinates Stamp / Vehicle Voltage Value / Custom Stamp / License Plate Stamp / Logo Stamp / Brand Model Stamp / HDR Stamp / Stamp Text Color.

Note:

1. To display the vehicle voltage value, the dashcam must be powered by the VIOFO HK6 Hardwire Cable.
2. You can change the stamp text color in the video file to white/yellow/cyan/golden.

- **Loop Recording:** 1 / 2 / 3 / 5 / 10 Minutes.

Recording will begin automatically after powering on with a microSD card in the device. Each recorded file is one minute long as a default and the old footage will be replaced when microSD card storage is full.

- **Time-lapse Recording:** Off / 1 / 2 / 3 / 5 / 10 fps.

Record video from frames captured at specific time intervals to conserve memory and reduce the time it takes to review video. The default is off.

- **Interior Camera:**

Off / On / Only On while Driving / Only On while Parking. You can enable / disable the interior camera under driving or parking mode.

- **Front Tele Camera:** Off / On / Only On while Driving / Only On while Parking.

You can enable / disable the telephoto camera under driving or parking mode.

Note: This setting is only available on the telephoto camera edition.

- **IR LED:** Off / On / Auto.

"On" means IR lights are always on, so the video color is black and white. "Auto" means the dash cam will decide to turn on/off infrared lights with different light condition. "Off" means the IR lights are all turned off.

- **Parking Recording**

Parking Mode:

There are 3 options under parking mode:

① Time Lapse Recording

Time lapse records a video at low frames at 1 / 2 / 3 / 5 / 10 fps, it keeps recording continuously without audio recorded.

Timelapse 1 fps mode supports Night Vision option, which can provide brighter and clearer night vision in extreme low light conditions, with lower power consumption.

② Low Bitrate Recording

This mode uses low bitrate to record video and audio, and uses small file sizes for continuous recording.

③ Auto Event Detection

The camera will automatically record a video sequence while a moving object is detected during parking. It will stop recording without new movements.

Note:

1. We recommend that you buy VIOFO HK4 ACC hardwire kit cable for parking mode recording.
2. In case you park the car outside in hot summer, we highly recommend time lapse recording mode. If the temperature inside the car goes above 60°C, we advise turning off the dashcam to avoid recording errors or even irreversible damages.

Parking Recording Timer:

"Off" means the camera will keep recording until the hardwire kits cut the power supply.

"1 Hour" means the camera will shut down after it gets into parking mode for 1 hour.

Enter Parking Mode Timer:

Set the timer for entering parking mode. (Only for hardwire cable, if you use external battery, this function will not work.)

"Off" means the camera will enter parking mode right away when the engine is off.

"90 Seconds" means the camera will enter parking mode 90 seconds after the engine is off.

Parking G-sensor:

The G-sensor detects significant or sudden movement (such as an impact or collision), it will trigger an event recording. We suggest setting it to High Sensitivity in parking mode recording.

Parking Motion Detection:

Adjusts the sensitivity of the motion detection so minor motion caused by wind or rain doesn't trigger a recording.

Parking GPS:

Turn on / off GPS logger in parking mode.

Parking HDR:

Turn on / off HDR in parking mode.

GeoFencing:

Turn Off / On Zone 1 / Zone 2 / Zone 3.

Define up to three areas where parking surveillance is not required (e.g., a private garage). When your vehicle enters a designated zone, the dash cam will power off completely instead of entering parking mode to conserve the vehicle's battery. If your vehicle is outside of the designated zones, or if the GPS signal is weak or lost, the dash cam will automatically enter parking mode.

- **Image Rotate & Mirror:**

Turn on / off the rear camera /interior camera / telephoto camera image rotate and mirror.

- **Custom Text Stamp:**

Imprint the customize text on the recorded video.

- **License Plate Number:**

Imprint the car number on the recorded video.

- **Live Video Source:**

Front Camera / Interior Camera / Rear camera / Front Tele Camera / Front Overlaid / Interior Overlaid / Rear Overlaid / Front Tele Overlaid / All Cameras.

- **Privacy Mode:**

Turn on / off privacy mode. When the privacy mode is on, the dashcam only saves the latest 2 (for single-channel camera) or 4 (for dual-channel camera) or 6 (for three-channel camera) normally recorded video files.

System Settings

- **Wi-Fi:** Off / 2.4GHz / 5GHz.

Set it On / Off. Press the [] button for 3 or 5 seconds to enable Wi-Fi quickly. We recommend choosing 5GHz Wi-Fi mode.

- **Bluetooth Button Function:**

Set the customized button functions for Bluetooth remote control. The Mic Button and Action Button can be set to control certain functions of the dashcam, including:

Turn On / Off Microphone

Take a Photo

Turn On / Off WiFi

Power Off

Switch to Timelapse Recording

Turn On / Off HDR

Parking Mode

Turn On / Off Interior Cam

Turn On / Off Rear Cam

Wi-Fi Station Mode

- **Time Zone:** Set the current time zone for GPS time and date calibration.

Note:

The time zone must be manually adjusted for daylight savings, except for the United States regions.

- **Time Format:**

24H / 12H. Set system time format.

- **Daylight Saving:**

Off / United States. Set US daylight saving on or off.

- **Date/Time:**

Set system date / time.

- **Boot delay:**

The camera will boot seconds delay when powered on. The settings are Off / 5 Seconds / 10 Seconds.

- **LED:**

All Off / All On / Power LED Only.

You can enable / disable the LED lights.

- **Parking Mode LED:**

All Off / All On / Power LED Only.

You can enable / disable the LED lights under Parking Mode.

- **Beep Sound:**

Off / Only Keytone / Only Boot Sound / All.

You can enable/disable the button and startup sounds.

- **Voice Notification:**

Turn on / off the voice notification.

- **Voice Notification Volume:**

Low / Medium / High

Adjust the volume of the voice notification.

- **Voice Control:**

Turn off / on the voice control.

When Voice Control is turned on, you can control the camera with spoken commands, using your voice to take photos, turn on/off Wi-Fi, start recording, and more.

Note:

Voice command language should be consistent with dashcam system language in following four options: English, Chinese, Russian, and Japanese. For all other dashcam language systems, English is the only language to trigger voice control function.

- **Voice Command:**

Voice recognition commands. You can issue different voice commands to remote control the camera, like:

- | | |
|---------------------|--------------------|
| - Take Photo | - Video Start |
| - Turn On Audio | - Turn Off Audio |
| - Turn On Screen | - Turn Off Screen |
| - Turn On Wi-Fi | - Turn Off Wi-Fi |
| - Show Front Camera | - Show Rear Camera |
| - Show Both Cameras | - Lock The Video |

- **GPS:**

Turn on / off GPS logger. A GPS module is used to include the location data in the recorded videos. If disabled, your camera will no longer measure your speed and position; nor synchronize the time / date. (Only available when connecting with GPS signal) Please use "VIOFO Player" to play back videos and to visualize your position and speed on your computer.

- **Speed Units:**

Kilometer per hour (km/h) and miles per hour (MPH) are available for speed units.

- **Screen Saver:**

The screen goes black by default after 1 minute while recording. You can set it by adjusting different time intervals on menu.

- **Frequency:**

Set it to minimize flickering and banding in the recorded video.

- **Language:**

Display language setting. (English, Traditional Chinese, French, etc.)

- **Format:**

The operation will delete all data on the microSD card.

Note:

Once you format the card, all information will be deleted and unrecoverable. Make sure to back up all files that you needed before formatting.

- **Format Reminder:** Off / 15 / 30 / 60 Days.

Set regular reminders for formatting the memory card.

- **Default Setting:** Restore device to factory settings.

- **Version:** Check the current firmware version of the camera.

File Lists

- **Video:** Video File Lists.

- **Photo:** Photo File Lists.

Firmware Upgrade

Follow the instructions on this website to upgrade the firmware: (<https://viofo.com/content/42-help-and-support/>)

Note:

- Before using a microSD card to upgrade the firmware, formatting the card in the camera is necessary to ensure stable read and write operation.
- Do not unplug or power off the camera during a firmware upgrade, it may cause the camera to subsequently fail to boot.

FCC Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio / TV technician for help.

Caution:

Any changes or modifications to this device not explicitly approved by the manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation subjects to the following two conditions:

- (1) This device may not cause harmful interference.
- (2) This device must accept any interference received, including interference that may cause undesired operation.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

Shenzhen VIOFO Technology Co., Ltd. declares that this Radio Frequency peripheral is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Thanks for choosing VIOFO!

From the date of purchase on, all products are warranted for 18 months and all accessories are warranted for 12 months. VIOFO offers lifetime technical support for all our users. We are committed to making sure that you are 100% satisfied with our products and services.

Product Registration Program

VIOFO also have Product Registration Program to help customers extend warranty by 6 months.

Visit www.viofo.com and register your new product to extend the warranty from 18 months to **24** months.





Scan the QR code to activate
6-month extended warranty now

Video Sharing

Share videos caught on VIOFO camera with us. Let's enjoy your new findings together! Gain a chance to get a mysterious gift at share@viofo.com.


How to Contact Us?

 Submit a ticket at support.viofo.com


 Live chat box at www.viofo.com

 support@viofo.com

 www.facebook.com/viofo

 +1 323 505 9898 (USA)
+1 323 609 9898 (Global)

 Mon-Fri 9am-6pm

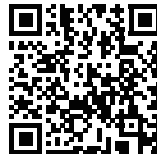

Scan the QR code to submit a ticket